


Caution when loading the retransfer film cassette and/or the ink ribbon cassette.

This describes the caution when the retransfer film cassette and/or the ink ribbon cassette is removed because of card jam or other troubles.

Please pay enough attention so that the retransfer film and/or ink ribbon is maintained at the right position.

Particularly, the ink ribbon is extremely thin, therefore it apt to slip down when the cassette is removed as shown in the illustration.

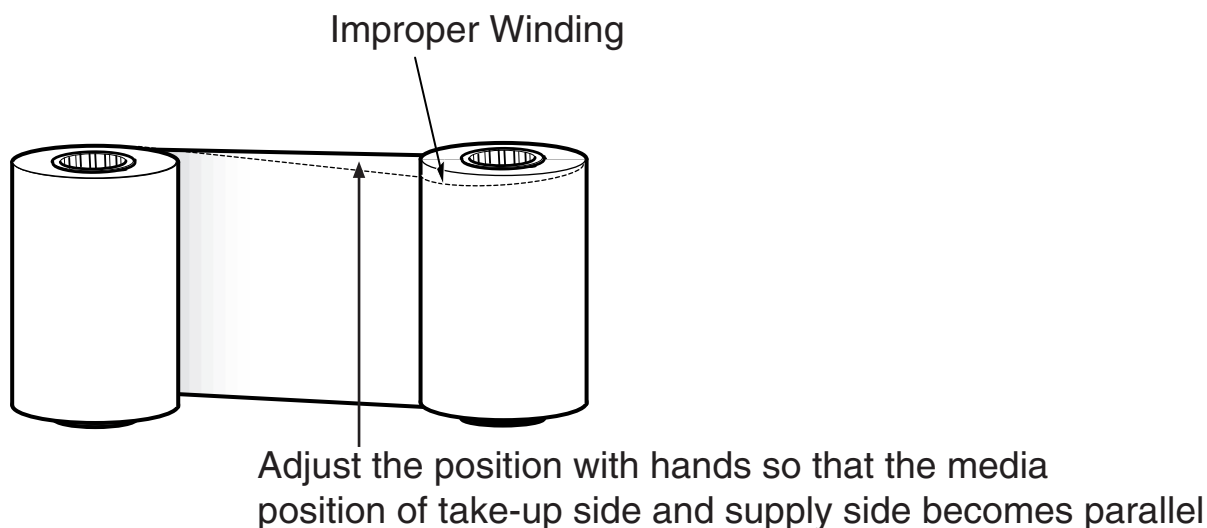

When loaded in this condition, it may cause improper printing such as INK RUNOUT error, improper color printing etc.

To avoid this, please handle the ink ribbon and/or the retransfer film very carefully with hands so that the media position of take-up side become parallel. Please do not touch the print side of the ink ribbon and/or the retransfer film with your hands. Otherwise, it may cause improper printing.

When adjusting the print position of the retransfer film and/or ink ribbon, please follow the instruction label attached on the cassettes.

On initialization when the retransfer film cassette and/or the ink ribbon cassette is loaded

Dust or foreign particles may attach on the surface of retransfer film and ink ribbon when their cassettes are removed from the printer.

This may cause defective printing such as image void, defective retransfer etc.

To avoid this, it is recommended that the retransfer film and the ink ribbon are wound up one or two panels after they are reloaded.

Please follow the initialization procedure described below:

1. Turn the power switch on, and wait until the LCD indicator displays "Preheat" or "Ready".

2. Depress the "RESET" key.

LCD indicator displays:

```
Initialize
                                     OK?
```

3. By depressing the "↓" key or the "↑" key, the LCD indicator display changes accordingly as shown below.

Select the wind-up condition, one panel or two panels.

(This set up is not memorized.)

```
Initialize
                2'nd Panel, OK?
```

Initialized after two panels of the retransfer film and the ink ribbon are wound up.

```
Initialize
                NEXT Panel, OK?
```

Initialized after one panel of the retransfer film and the ink ribbon is wound up.

```
Initialize
                                     OK?
```

Initialized without winding up.(Default)

4. By depressing the "ENTER" key, the printer is initialized according to the selected above set up condition.